

## **Tutorial: How to assemble the calibrated launcher**

- 1/ Position the launcher on the lateral attach angles as desired
- 2/ Use the disengageable screw to fix the launcher on the attach angle
- 3/ Loosen the screw then adjust the orientation of the launcher