

## **Tutorial: How is the remote controller working?**

1/ Press on the “ON” button to start the remote controller

2/ Press on the “+/-” buttons to adjust the desired time gap between 2 marking points from 20 to 100 ms

3/ switch the puck on, launch it and press the “ print” button on the remote controller (hold it down as long as you want to print)